


OFF-PEAK METERING 2 C.T. 6 TERMINAL SOCKET

NOTES:

1. Meter installed outside.
2. Meter socket 240v reference can be shared with water heater or dedicated breaker.
3. Load direction through Current Transformers (CT's) is critical for proper metering. Note all circuits separated by "A" and "B" side. Circuits enter the same side of CT from service panel. (note dot)
4. CT must be in separate box unless used on main feeds of a service panel.
5. Prewired CTs can be no further than 25ft from the meter socket. J-box size 8x8x4 minimum.
6. Terminal block CTs used for distances 25 to 100ft. J-box size 12x12x4 minimum.
7. All meter wiring is 12 AWG wire minimum.

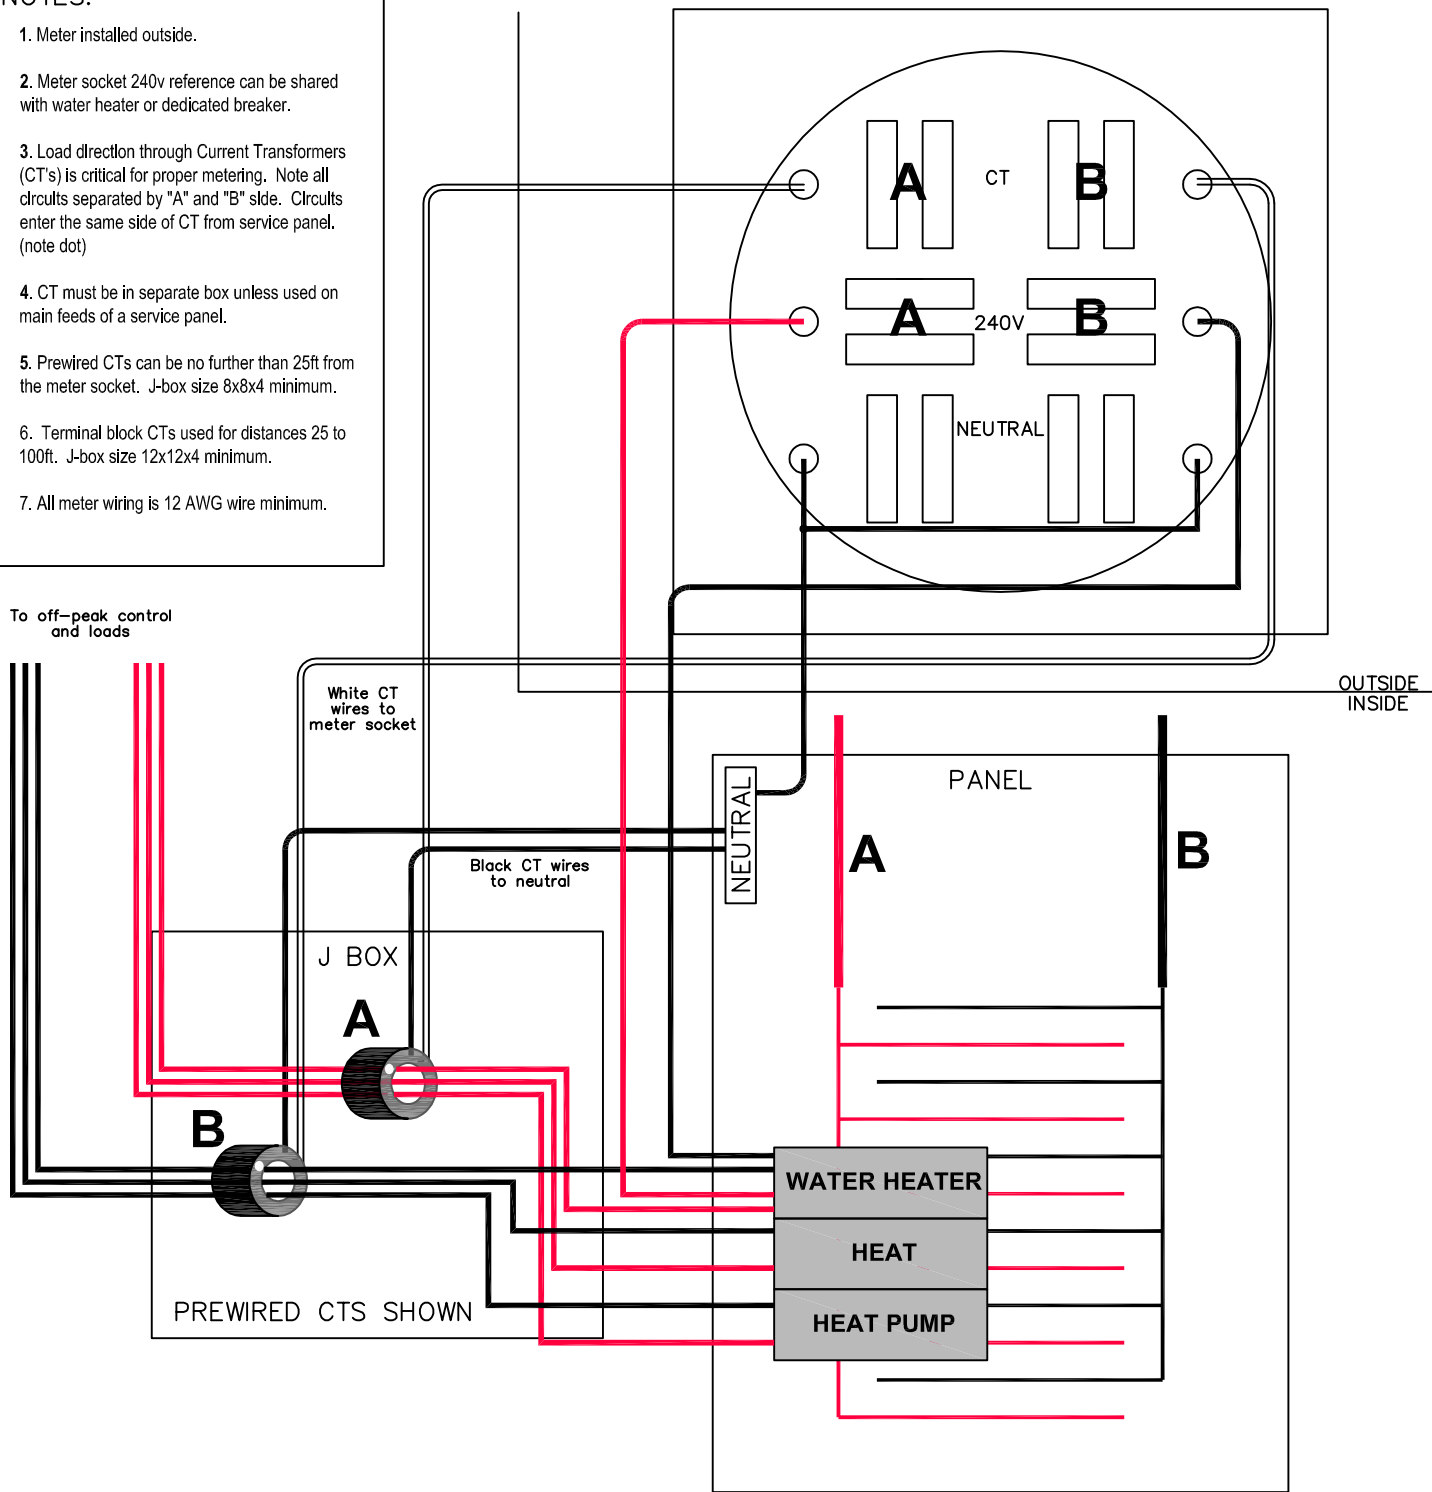

C. T. METERING

DRAWN BY: NWL	DWG: OFFPEAK-04	REV BY: NWL
DATE: 3/20/03	SHEET 1 OF 1	REV DATE: 9/01/09